


1 Identify the Decorative gable: look for the piece with the holes on the inside face —find the larger holes used for the assembly dowels.

Wooden dowels are inserted to align the carcass components and provide structural strength...


Standard across the range are the adjustable shelf holes.

Colours of cabinet on this instruction is indicative of decorative board only...

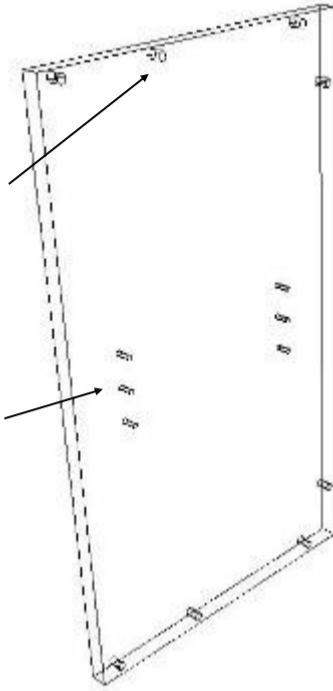


2 Construction Style: A standard (Semble) wall carcass is 300mm deep (see red line) & once doors are hung on front finishes at 320mm from the wall.


In order that the Open Shelf unit sits flush with other cabinets, the carcass itself is extended to 320mm (see black line) allowing a neat visual line of joinery once installed.

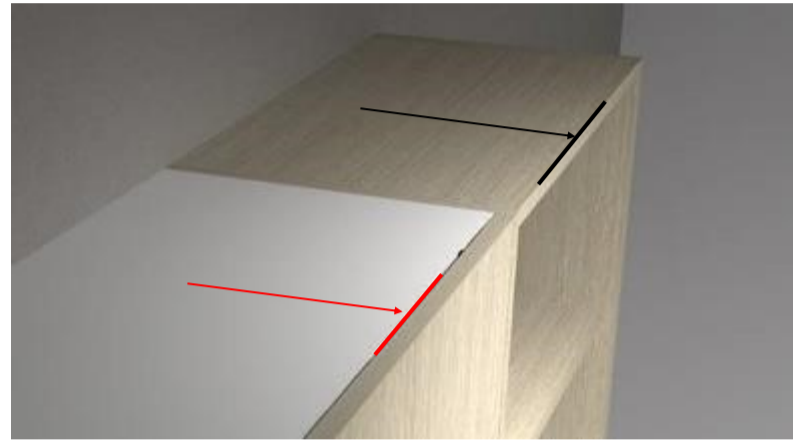

3 Identify the back: insert dowels into the holes—then join this back with one of the gables... Be sure to secure this join by inserting screws in the small holes from the outside

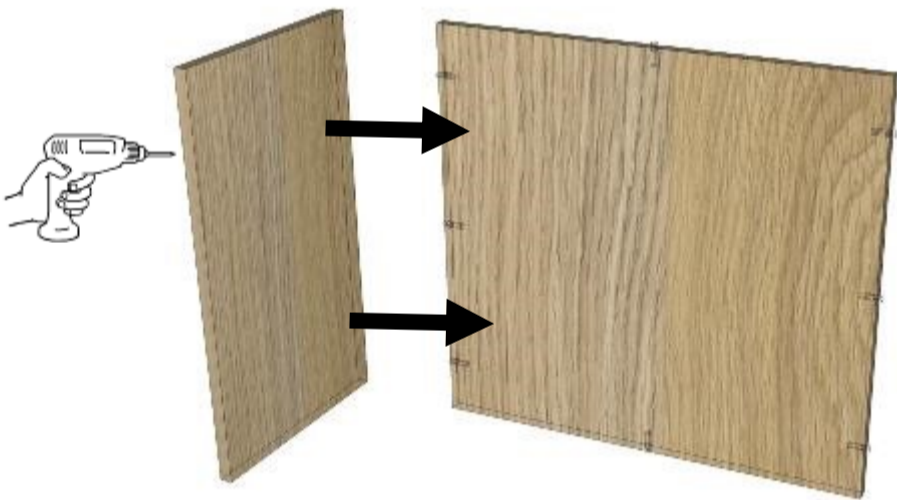


4 Now place carcass on end. Insert dowels into the top & bottom ... and insert these into the gable.

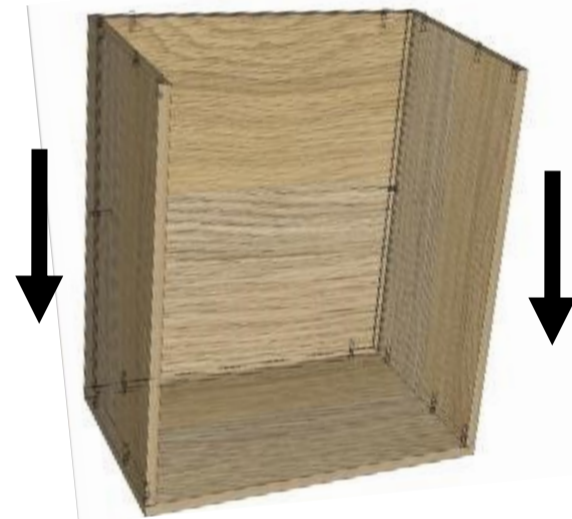

The top & bottom of your carcass are dowelled into the back & the gable so ensure these are correctly located.

5 Almost there: place the last gable on to the carcass ensuring the dowels are aligned. Then secure with screws in the remaining holes.

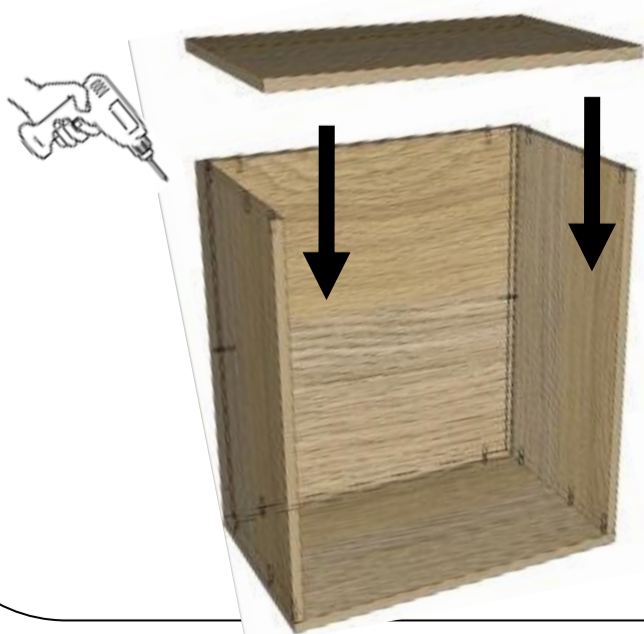

6 You're finished! check you don't have any holes leftover... (EXCEPT for your adjustable shelf holes)

